



# Face Mount

## Straight Cable Runs and Cable Runs through One Corner

Deck 1 has only one end post at the corners. The posts next to the house butt right up to it so the back sides of those posts are not accessible. Run #1 is still through the post, so it will take a Series 262 kit. Runs #2 and #3 connect to the *face* of the corner post going back toward the house to keep the cables on the same plane. They also connect to the *face* of the posts next to the house as well.

### Use the 300 Series.

The tensioning device is an Adjust-a-Body® with Hanger Bolt, which lags into the wood post on one end. A Push-Lock® Lag is lagged into the other end.

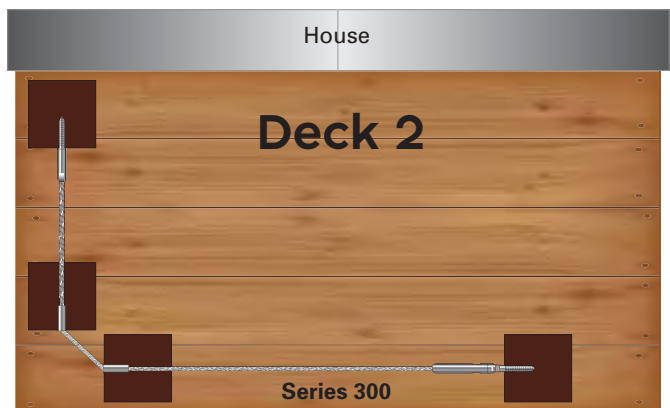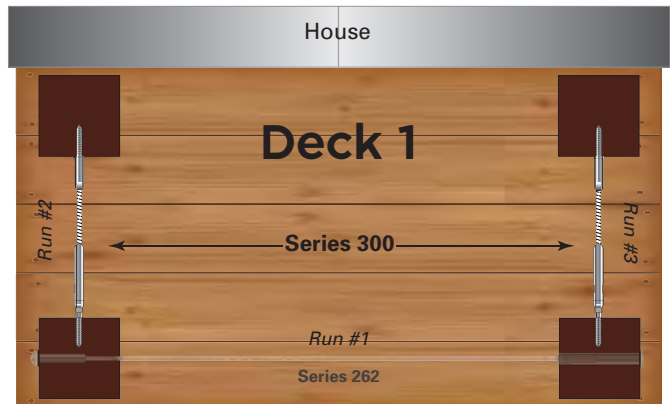

### Series 300 Kits

Cable Length	1/8" cable	3/16" cable
	PART NO.	PART NO.
5'	30005	30005-6
10'	30010	30010-6
15'	30015	30015-6
20'	30020	30020-6
25'	30025	30025-6
30'	30030	30030-6
40'	30040	30040-6
50'	30050	30050-6

### Tools needed for 300 Series:

- 5/32 drill bit if 1/8" cable, 7/32 if 3/16" cable
- 7/32 drill bit for hanger bolt and lag installation
- 3/8 hex wrench for turning hanger bolt
- 7/16 wrench for tensioning Adjust-a-Body®
- 3/8 wrench for installing Push-Lock® Lag
- Cable cutting tool
- If using post protector tubes, 1/4 drill bit