

Face Mount

Cable Runs through Two Corners

When going around two corners, it's necessary to tension the cable from both ends as shown in Deck 3.


Use the 471 Series.

The tensioning devices are an Adjust-a-Body® with Threaded Bolt, which threads into the metal post on one end, and a Push-Lock® Turnbuckle with Threaded Bolt on the other end.



Series 471 Kits

Cable Length	1/8" cable	3/16" cable
	PART NO.	PART NO.
30'	47130	47130-6
40'	47140	47140-6
50'	47150	47150-6
60'	47160	47160-6

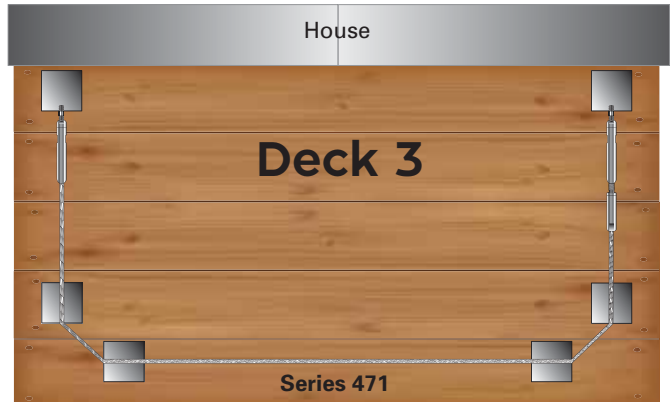

Tools needed for 471 Series:

- 5/32 drill bit if 1/8" cable, 7/32 if 3/16"
- Cutting tap drill bit I (for pilot hole) and 5/16-24 tap for threaded bolt installation
- 1/4 wrench for installing threaded bolts
- 3/8 wrench for tensioning Push-Lock® Stud Cable cutting tool